Switching assembly

Order number

03-S211-0053

Index

1	General	.1
2	Assembly	.1
3	Electrical connection	.4

1 General

Attention! Connection and maintenance of the magnet end switch must be carried out exclusively by qualified specialists, that are familiar with the relevant instructions. The safety regulations have to be observed as well.

The magnet limit switch is used to switch off the travel order for the motorized cable trolleys in their final positions. The switch-off is takes place in the direction to land side only and is independent of the crane main trolley. The switch-off secures a proper operation of the festoon system even under extreme conditions.

2 Assembly

Each motorized cable trolleys is associated with a specific magnet limit switch. The mounting positions of the motorized cable trolleys are defined in the system drawing.

The first motorized cable trolley (MCT) is associated with the magnet limit switch of the switching assembly 03-S211-0053 page 1 with the designation "Trolley 1" etc.

The magnets are already pre-mounted to the motorized cable trolley ex works according to their position.

Trolley 1 - south; Trolley 2 - north

The magnet switches on the track beam have to be mounted accordingly in the right height level. The height level (distance to magnet) is very important for proper switching of it.

Page





Land side







View of sight from end clamp to towing clamp

Wagen 2 / Trolley 2





View of sight from end clamp to towing clamp

Magnet Limit Switch Switching assembly



Attention! The assembly positions of the magnet limit switches have to be carried out very exactly, since there are different switching distances that are applied.

The fixation of the magnet switches at the track beam is made with mounting brackets. For the assembly it is important to weld the mounting plate to the track beam according to the following sketch. With the slotted holes at the mounting bracket the magnet switch can be readjusted according to the motorized cable trolley during the assembly.

Drilling Scheme





Switching assembly

Position of the magnet limit switches

The positions of the magnet limit switches for land and/ or sea side you will find on the system drawing for the festoon system.

Landseite / land side

Wasserseite / water side



3 Electrical connection

The supply voltage for the limit switches is provided at the terminal block bar by the control. See circuit diagram. The cable required for the electrical connection of the magnet switches is not included in the supply schedule by Conductix-Wampfler and has to be realized by the customer.

Switching assembly



Conductix-Wampfler GmbH Rheinstraße 27 + 33 79576 Weil am Rhein - Märkt Germany



Importer for the United Kingdom: Conductix-Wampfler Ltd. 1, Michigan Avenue Salford M50 2GY United Kingdom Phone: +49 (0) 7621 662-0 Fax: +49 (0) 7621 662-144 info.de@conductix.com www.conductix.com

Phone: +44 161 8480161 Fax: +44 161 8737017 info.uk@conductix.com www.conductix.com