Enclosed Conductor Rail Xline

for Overhead Cranes



Xline

swift • simple • safe






- High contact quality due to X layout
- Redundant PE contact according to international regulations
- Largely tool-free assembly
- Clever logistics concept
- Pre-assembled ready for installation
- Product selection made easy

Contents

System Overview	
The Logistics Concept	4
The System Components	5
Technical Specifications	6
Special environmental conditions / physical limits	7
Achieve more with the X swiftly, easily and tool-free	8
Smart logistics, too	9
System Design	
Layout / Choosing Components	10
Checking the voltage drop	
System Modules	
Basic module Xline	
Upgrade set 4- to 5-pole current collector	
Track modules	13
Accessories & Optional Components	
Additional current collector	14
Upgrade set 4- to 5-pole current collector	
Current collector connection cable (option)	
Current collector console (option)	14
Chain towing device	15
Support arm consoles standard (option) version 1	15
Support arm consoles for installation close to the wall (option) version 2	15
Track support bracket, bare, to weld on (option)	
Phase control LEDs (option)	
Hanger clamps (additional need)	
Hanger clamps for higher temperature range and as fall arrest device (option)	
Anchor clamps (option)	18
System Sketch	
Spare Parts & Service Sets	
-	
Current collector	
Spare parts package (basic modules)	
Spare clamps	
Sliding contact set.	
Spare end cap	
End cap	20
Power feed	20
Service set	20
FAQ	
Detailed technical design and application information	
Technical design	22
Crane operating modes according to IEC 60034-1	
Load values for the different operating modes and operating temperatures (ambient temperature)	
Calculation of the voltage drop	
Current load and protection	
Use of the conductor rail.	
Cable connection and cable routing of the current collector Environmental influences and protection class	
Conductor rail and PE function	
General information	

We reserve the right to make changes to the product at any time in the course of technical progress without prior notice. All our devices are CE-compliant. Our general terms and conditions apply. We will be happy to send you these on request. Reprinting, even in extracts, is only permitted with our approval.

The System Components

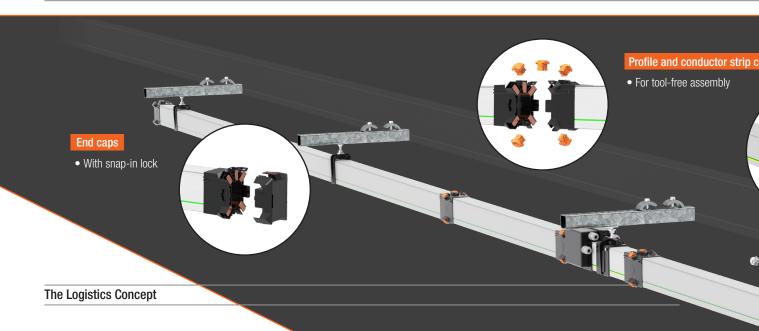

In addition to the item information, packaging modules are marked with a colored form element.

This enables quick identification, even from a distance, simplifies warehouse processes, actively prevents incorrect system combinations and reduces process expenditures and follow-up costs.

3304670	

Example: 4-pole track module, 24 m, 63 A

084311-46-1-24

4 P 24 m 63 A

Article	Length	Number of Poles	Amperage (100% DC)		Color/Symbol								
Basic module (End caps)	B												
		4	63		B								
Basic modules (power feed)		4		80	B								
1000)		5	63		B								
		5		80	B								
		4	63										
	4	4		80									
		5	63										
		5		80									
		4	63										
Track modules	10	4		80									
Hack Houdies	12	5	63										
		5		80									
			63										
	24	4		80									
	<u> </u>	_	63										
											5		80

onnection '



Track Power feed with plug connection

- With single-wire feeding system (2 m)
- With fixing point (included in delivery)
- including installation and service stickers

End feed with system connector

- Power supply with easy access to the terminal strip
- Installation and service labels included
- With integrated anchor clamp
- Optional 3-phase LED display



Hanger clamps

- With hexagon nut and square nut
- For mounting on 30 mm C-rail



Current collector support

- Adjustable
- Optional

Current collector trolley

- With rendundant PE contact (no second trolley required)
- Rated current 34 A (100% duty cycle)
- With integrated connection terminals



Technical Specifications

Enclosed conductor rail	Xline					
	Components for creating an energy supply system in the standard crane sector, such as manual overhead					
Area of application	cranes, hoists and assembly cranes. For indoor and protected outdoor use (IP2X)					
Protection class (IEC/EN 60529)	IP 2X					
Altitude	< 2000 m above sea I	evel				
Course / length	Up to 100 m (without 6	expansion element) – lo	nger systems possible, depending on voltage drop			
Installation orientation	Horizontal with current	collector engagement f	rom below			
Segment length	4 m (can be cut to size	on the last rail section	on site)			
Temperature range	-30 °C to +55 °C					
Operating temperature range			5 °C (generally reduced impact resistance and long-term atures. See also notes on page 7).			
Max. Temperature change	40 °K					
Suspension spacing	nom. 2 m, independen	nt of temperature range				
Number of poles	4- and 5-pole					
Rated voltage	35 to 690 V (UL: 600 V	V)				
Cross-section / rated current /	cross-section [mm²]	Rated current	Crane operating mode (for details see technical design, page 22)			
crane operating modes	10	63 A	S1 - S9			
Insulating profile	High-grade vinyl-based	80 A d insulation plastic, wea	S1 - S9			
Dimensions (L x W x H)						
, ,	Nom. 4000 mm (20 °C) x 56 mm x 90 mm (compatible with Program 0842)					
Dielectric strength (IEC 60243-1-3)	30 to 40 kV/mm					
Tracking resistance (EN 69112)	CTI 400-2,7					
Surface resistance (IEC 60093)	10 EXP13 Ω					
Contact resistance (IEC 60093)	5 x 10 EXP 15 Ω/cm					
Reaction to fire (UL 94)	flame-retardant and se	elf-extinguishing accordi	ng to UL 94 class VO			
Connection	Self-centering plug-in	system with latching fur	nction (tool-free)			
Conductor strips	Electrolytic copper					
Connections	Via series terminals (current collector) or terminal block (feed-in)					
Current Collector	4-pole (can be upgraded to 5-pole (with upgrade set 5th pole)					
Rated current	34 A (100% duty cycle	e at 35 °C)				
Cable cross-section	4 mm ² (clamping rang	e 1,5 to 4 mm²)				
PE Sliding contact	Redundant 2 nd contact	(in accordance with DIN	I EN 60204-32)			
Max. Speed	Max. 150 m/min					
Speed for crane applications		ccordance with DIN EN nt switches and 80 m/m	13557:2009-07 /DGUV in for hand-held radio transmitter operation)			

Special environmental conditions / physical limits

Low temperature ranges -30° to -5° C:

All enclosed conductor rails use the plastic body as the supporting element. Plastics are physically limited in their temperature range. At temperatures below freezing point, the breaking strength of plastic decreases and insulation values may change.

This must be taken into account when assessing the application and further measures must be considered. Possible on-site measures at low temperatures as part of the system evaluation: e.g. protection against external influences, installation outside of reachable areas and periodic visual inspection and measurement of the insulation parameters after prolonged use.

Condensing moisture, dust exposure and unprotected outdoor use:

In contrast to single-pole conductor rails, which are installed separately from each other outdoors, enclosed conductor rails have a common insulation body. Condensation caused by rising damp, fog etc. or the accumulation of dust can lead to insulation faults.

In wet conditions and with high dust exposure, box conductor rails have physical limits and, if necessary, single-pole conductor rails should be used.



Achieve more with the X... swiftly, easily and tool-free

Unique solution

Xline, with its unique and most rigid honeycomb profile, sets new standards for enclosed conductor rails. The X arrangement of the sliding contacts ensures optimum contact quality and guidance of the collector trolley. The tool-free connection technology enables quick, safe and intuitive assembly. The connector parts guide themselves into position and lock noticeably and audibly. Corner position of the conductor strips and connectors allows for good accessibility to the system's flip side. The connections can be done even when the view is obstructed, and with gloves.

Pre-assembled at the factory

The factory pre-assembled rails have a nominal length of 4 m. Intermediate lengths are possible by shortening the last rail on site, easily and with standard tools.

No expansion modules

Expansion modules or segments are not necessary. The thermal expansion is compensated within each rail. In addition to cutting down on expansion modules, the mechanical load on the components is reduced.

Tool-free connector technology

Terminal points on the current collector and power feeds are easily accessible, simplifying the installation of the customer's connecting cables and reducing installation time.

Standards-compliant and long-lasting


The current collector trolley is equipped with high-performance bearings and long-life sliding contacts for a long operating time with high contact quality and redundant protective earth contacts. The use of a second current collector is therefore not necessary, even for inverter operations.

Swift and safe installation

Xline has been developed for quick and safe assembly in accordance with current international standards. Pre-assembled at the factory and supplied with all the components required for assembly, unnecessary handling and searching, as well as additional set-up and pre-assembly work are avoided.

Error-free and high assembly quality

Intuitive mounting not only supports fast assembly. It shortens the training period, actively reduces the potential for errors and thus optimizes assembly time and work quality.

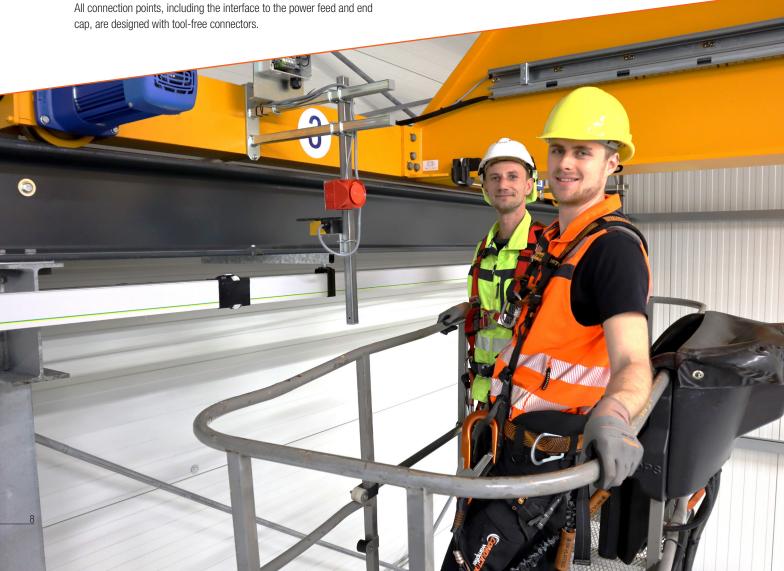

Smart logistics, too

Modular concept

Xline is supplied in modules that can be quickly assembled to form the required system. All parts needed for a work step or track section are logically arranged in the basic- or track modules. Everything is where you need it — and can be found without time-consuming searching!

Basic modules

The basic module contains all the single parts required for a system. This includes the power feed, an anchor point, an end cap and a set of labels to record the installation date and the next service date. A spare parts package with small parts and documentation are also included. This reduces the quotation, ordering and preparation of many individual parts to a single item.

Upgrade set 4- to 5-pole

For 5-pole systems, the current collector is supplemented with the sliding contact for the fith pole by means of an optional upgrade set and a few simple steps.

Track modules

4, 12 and 24 m modules can be provided for the track which, in addition to the pre-assembled rails, contain the hanger clamps and connectors for the conductor rails. This means that all components for the track section are combined and route times are optimized, and there is no need to search for accessories in boxes and cartons.




System Design

Layout / Choosing Components

The system is assembled quickly and easily using the input information from the crane/hoist manufacturer (rated current of the conductor rail, number of poles and length).

- **Step 1**: Current and number of poles from the hoist/crane manufacturer's specifications => rail type
- Step 2: Crane runway length => number of modules from the selection table
- Step 3: Check voltage drop according to table
- Step 4: Selection of options

Quotations and orders can also be created via our online shop, by using a configurator!

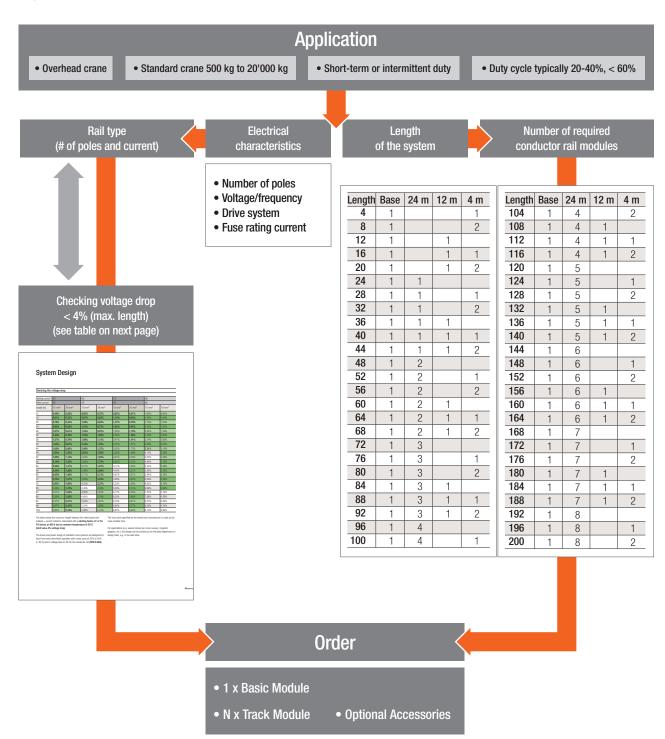

System Design

Checking the voltage drop

Starting current	42	60			76		96		
Rated current	35		50		63	63		80	
Length [m]	10 mm ²	16 mm ²	10 mm ²	16 mm²	10 mm ²	16 mm ²	10 mm ²	16 mm ²	
12	0,46%	0,26%	0,65%	0,37%	0,82%	0,47%	1,05%	0,60%	
16	0,61%	0,35%	0,87%	0,50%	1,10%	0,63%	1,40%	0,80%	
20	0,76%	0,44%	1,09%	0,62%	1,37%	0,79%	1,75%	1,00%	
24	0,92%	0,52%	1,31%	0,75%	1,65%	0,94%	2,10%	1,20%	
28	1,07%	0,61%	1,53%	0,87%	1,92%	1,10%	2,44%	1,40%	
32	1,22%	0,70%	1,75%	1,00%	2,20%	1,26%	2,79%	1,60%	
36	1,37%	0,79%	1,96%	1,12%	2,47%	1,41%	3,14%	1,80%	
40	1,53%	0,87%	2,18%	1,25%	2,75%	1,57%	3,49%	2,00%	
44	1,68%	0,96%	2,40%	1,37%	3,02%	1,73%	3,84%	2,19%	
48	1,83%	1,05%	2,62%	1,50%	3,30%	1,89%	4,19%	2,39%	
52	1,99%	1,13%	2,84%	1,62%	3,57%	2,04%	4,54%	2,59%	
56	2,14%	1,22%	3,06%	1,75%	3,85%	2,20%	4,89%	2,79%	
60	2,29%	1,31%	3,27%	1,87%	4,12%	2,36%	5,24%	2,99%	
64	2,44%	1,40%	3,49%	2,00%	4,40%	2,51%	5,59%	3,19%	
68	2,60%	1,48%	3,71%	2,12%	4,67%	2,67%	5,94%	3,39%	
72	2,75%	1,57%	3,93%	2,24%	4,95%	2,83%	6,29%	3,59%	
76	2,90%	1,66%	4,15%	2,37%	5,22%	2,99%	6,63%	3,79%	
80	3,06%	1,75%	4,36%	2,49%	5,50%	3,14%	6,98%	3,99%	
84	3,21%	1,83%	4,58%	2,62%	5,77%	3,30%	7,33%	4,19%	
88	3,36%	1,92%	4,80%	2,74%	6,05%	3,46%	7,68%	4,39%	
92	3,51%	2,01%	5,02%	2,87%	6,32%	3,61%	8,03%	4,59%	
96	3,67%	2,10%	5,24%	2,99%	6,60%	3,77%	8,38%	4,79%	
100	3,82%	2,18%	5,46%	3,12%	6,87%	3,93%	8,73%	4,99%	

The table shows the maximum length between the infeed point and outfeed = current collector. Calculated with a **starting factor of 1.2 for F/U drives at 400 V and an ambient temperature of 20°C**(limit value 4% voltage drop).

The drives and power supply of standard crane systems are designed for short-time and intermittent operation with a duty cycle of 20% to 40% (< 60%) and a voltage drop of 4% for the conductor rail (**FEM 9.683**).

The fuse value specified by the hoist/crane manufacturer is used as the input variable here.


For applications (e.g. several cranes per crane runway, magnetic grippers, etc.), the design can be carried out via the sales department or design tools, e.g. in our web store.

System Modules

Basic module Xline

Single parts such as end cap, power feed, current collector, etc. are packed in the basic module, together with a spare parts package and assembly documentation. The basic module can be used in combination with all track modules. When using systems with a 5th pole, an additional upgrade set for the current collector is required.

Basic module end feed Xline

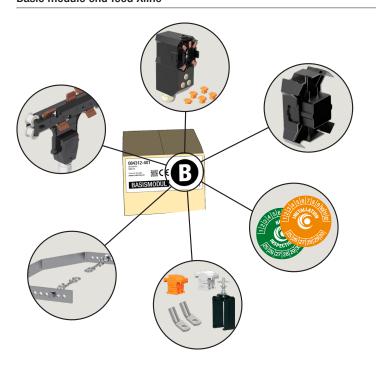

Content


- 1 x end feed (4-/5-pole and 63 A / 80 A) with integrated fixed point
- 1 x current collector 4-pole
- 1 x end cap
- 1 x small parts kit
- 1 x chain towing device (simple)
- 1 x assembly instructions
- 1 x sticker set

Order number: 084312-4x1

Dimensions: 758 mm x 276 mm x 274 mm

Weight: 6,8 kg

Basic module power feed Xline

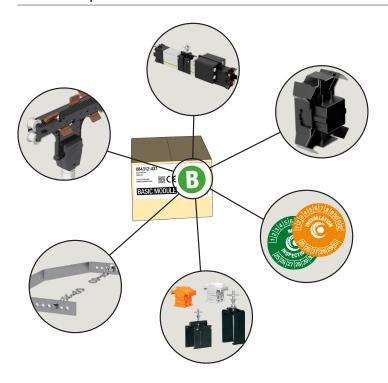

Content

- 1 x track power feed
- 1 x current collector 4-pole
- 2 x end caps
- 1 x fixed point
- 1 x hanger clamps
- 5 x clamps (63 A or 80 A)
- 1 x chain towing device (simple)
- 1 x assembly instructions
- 1 x sticker set

Order numbers:

4Pol/63A: 084312-4X36 5Pol/63A: 084312-5X36 4Pol/80A: 084312-4x37 5Pol/80A: 084312-5x37


Dimensions: 758 mm x 276 mm x 274 mm

Weight: 8,7 kg - 9,2 kg

System Modules

Track modules

The modules are available ready to install for 4, 12, and 24 m, as well as 128 m for larger project requirements to build the track. All parts required for the rail section and the connection, such as hanger clamps and conductor strip connectors, are included in the scope of delivery. Adaptation to intermediate lengths is easily possible on site by shortening the last rail.

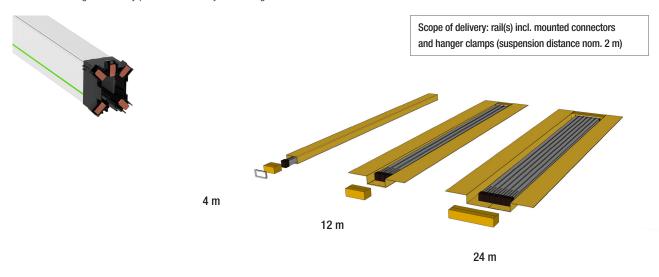

Part Nos. Xlir Track module		Track modules							
Rated current	Number	4 m (1 v 4 m)	Weight	12 m (3 x 4 m)	Weight	24 m (6 v 4 m)	Weight	128 m (32 x 4 m)	Weight
nateu current	of poles	4 m (1 x 4 m)	[kg]	12 111 (3 X 4 111)	[kg]	24 m (6 x 4 m)	[kg]	120 111 (32 X 4 111)	[kg]
60.4	4	084311-46-1-04	5,0	084311-46-1-12	13,7	084311-46-1-24	22,7	084311-46-1-24	90,0
63 A	5	084311-56-1-04	5,3	084311-56-1-12	14,8	084311-56-1-24	24,7	084311-47-1-24	123,8
00.4	4	084311-47-1-04	5,9	084311-47-1-12	16,7	084311-47-1-24	28,6	084311-56-1-24	102,6
80 A	5	084311-57-1-04	6,5	084311-57-1-12	18,5	084311-57-1-24	32,1	084311-57-1-24	142,5
Dimensions [m	m]	4030 x 75 x160		4400 x 300 x 120		4400 x 600 x 120		4200 x 700 x 450	

Additional current collector



Current collector trolley 4-pole 34 A 100% DC with integrated terminal blocks for on-site cable

Clamping range: 1,5 - 4 mm²
Screw connection: I125
Cable diameter: 11 - 17 mm

Part No.: 084301-4x20

Weight: 1,2 kg

Upgrade set 4- to 5-pole current collector



conversion time from 4 to 5 pole current collector: 2-3 mins.

Upgrade-Set

The set includes the fifth sliding contact, a prefabricated connecting cable and connection parts. The fifth sliding contact is inserted into the mounting opening on the trolley, screwed together with the connecting cable and the second end of the cable is placed in the terminal strip.

Part No.: 084394-01

Weight: 0,1 kg

Current collector connection cable (option)



Note: The length of the current collector connection cable must not exceed 3 m if the upstream overcurrent protection device is not designed for the load capacity of this connection cable. See also DIN VDE 0100, Part 430 and DIN EN 60204-32 (cranes) in accordance with IEC EN 60204 T32 (cranes).


Cable type H07RN-F 5G4

- Rubber hose cable
- Number of cores: 5
- Cross-section: 4 mm²
- Length: 3 m (configurable)

Part No.: 131110-R5G4#

Weight: 0,45 kg/m

Current collector console (option)

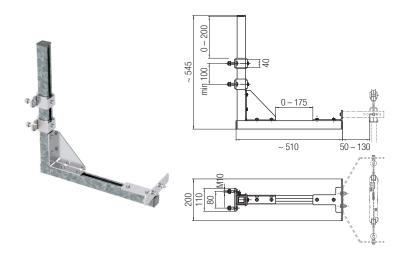

Console, consisting of C-rails and mounting parts

- Infinitely adjustable and can be shortened (partially pre-assembled)
- Galvanized steel incl. fastening material
- Can be used for single and double towing chain device


Part No.: 084291-50

Weight: 6,1 kg

Dimensions: 786 x 284 x 285 mm

Towing chain device



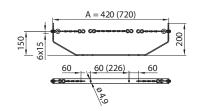

Towing device for current collector trolleys

- Mounting surface on the side or underneath the current collector
- Chains included in the scope of delivery


Single towing chain arm (A = 420 mm)

Part No.: 084291-11 Weight: 0.9 kg

Double towing chain arm (A = 720 mm)

Part No: 084291-12 Weight: 1.3 kg

Support arm consoles standard (option) version 1

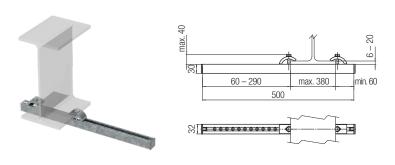

Universal connection to the track girder using C-rail support arms and girder clips (front and rear) $\,$

Fastening set for fastening the enclosed conductor rail to steel girders (mounted with girder clips)


- \bullet 5 x support arms, L = 500 mm
- 10 x clamping claws, s = 6-25 mm
- mounting sketch

Part No.: 084395-03

Weight: 5,5 kg

Dimensions: 786 x 284 x 285 mm

Support arm consoles for installation close to the wall (option) version 2

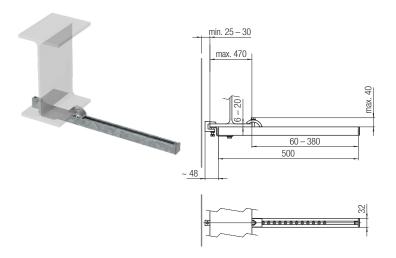

Consoles for use with restricted access to the track beam. The rear clamp is clamped to the bottom flange from below using a beam clamp. This ensures that the rail is clamped at the front and rear. This meets the requirements for safe-ty-compliant suspension of the conductor rail.

Fastening set for fastening the enclosed conductor rail to steel girders (installation close to the wall)

- 5 x support arms, L = 500 mm
- 5 x clamping claws, s = 6-25 mm
- 5 x brackets (Z profile) incl. screw and square nut
- 5 x beam clamps
- · mounting sketch


Part No.: 084395-05

Weight: 6,3 kg

Dimensions: 786 x 284 x 285 mm

Track support bracket, bare, to weld on (option)



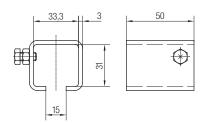

Part No.: 023224

Weight: 0,13 kg Packaging unit: 1 pc.

For further fastening solutions for C-rails, see catalog for program 0230.

Phase control LEDs (option)



The end feed can be upgraded with 3 LEDs for visualizing the phase voltages using the optional retrofit kit. The LEDs are installed in the end feed instead of the dummy cover.


LEDs

- Pre-assembled connecting cables
- with integrated fuse

Part No.: 084394-02 Weight: 0,1 kg

Hanger clamps (additional need)



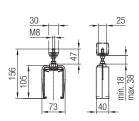


Note: All hanger clamps required as standard are included in the scope of delivery of the track modules.

Part No.: 08-S280-0895

Weight: 0,1 kg Packaging unit: 1 pc.

Hanger clamps for higher temperature range and as fall arrest device (option)



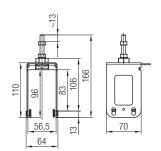


For applications with large temperature fluctuations or exposed locations (risk of damage or critical environmental conditions such as high air pollution with drilling emulsion, aromatic solvents, etc.), hanger clamps with roller supports are recommended.

Part No.: 084245-22

Weightt: 0,4 kg Packaging unit: 1 pc.

Anchor clamps (option)



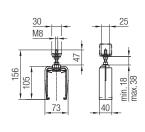


Anchor clamp

As an alternative to the anchor point integrated in the end feed.

Part No.: 08-F080-0099

Weight: 0,1 kg

System sketch

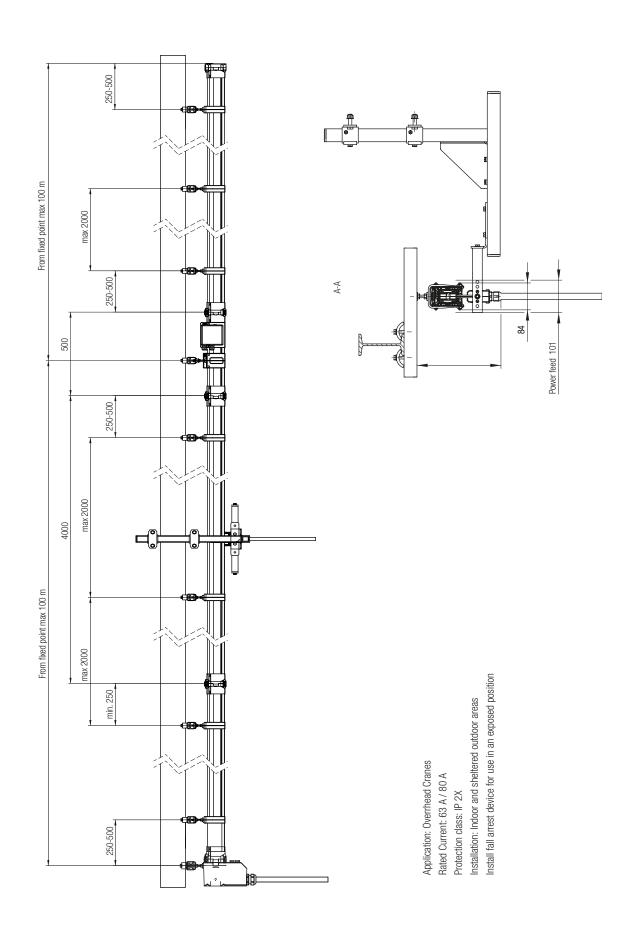

Spare Parts & Service Sets

Current collector



Current collector trolley 4-pole 34 A 100% duty cycle

With integrated terminal blocks for on-site cable connection.

Clamping range: 1.5-4 mm²

Cable gland: M25

Part No.: 084301-4x20

Weight: 1,2 kg

Upgrade set 4- to 5-pole current collector



conversion time from 4 to 5 pole current collector: 2-3 mins.

Upgrade sliding contact to 5-pole collector

The set includes the fifth sliding contact, a prefabricated connecting cable and connection parts. The fifth sliding contact is inserted into the mounting opening on the trolley, screwed together with the connecting cable and the second end of the cable is placed in the terminal strip.

Part No.: 084394-01

Weight: 0,1 kg

Spare parts package (basic modules)



Set as supplied with the basic module. Includes all small parts and spare parts that may be required for assembly.

- 1 x clamping set (63 A / 80 A)
- 1 x hanger clamps
- 4 x screws for end feed cover/current collector cover
- 2 x tubular cable lug for feed-in 16 mm²

Part No.: 084395-01

Spare clamps





80 A

63 A

Spare clamping set (63 A), 10 x 10 mm² (gray)

Part No.: 084395-08

Spare clamping set (80 A), 10 x 16 mm² (orange)

Part No.: 084395-09

Spare Parts & Service Sets

Sliding contact set



Spare sliding contact set

• 5 x spare sliding contacts for 4-pole current collector (for 5-pole version additionally 084394-01 required)

Part No.: 081007-113S

Weight: 0,1 kg

Spare end cap



End cap for rail end

• tool-free

Part No.: 08437-1

Weight: 0,2 kg

Power feed



Power feed 63 A / 80 A incl. tubular cable lugs 16 mm²

• Cable gland: M40

• Clamping range: 19 - 28 mm

Part No.: 084351

Weight: 1 kg

Track power feed



Track power feed

- Single-wire feed system (2 m)
- 1x Fixing point

Part No.:

4-pole / 63 A: 084353-46 Weight: 2,6 kg **5-pole / 63 A: 084353-56** Weight: 2,9kg **4-pole / 80 A: 084353-47** Weight: 2,7kg **5-pole / 80 A: 084353-57** Weight: 3,0kg

Spare Parts & Service Sets

Service-Set



Spare parts kit for the service trolley with additional spare parts and optional components.

- 6 x hanger clamps
- 2 x clamping set (10 x 63 A/10 x 80 A)
- 2 x upgrade-set 5th pole
- 2 x phase control LEDs
- 2 x sticker set
- 1 x end cap
- 2 x connector cap for conductor rail profile
- 1 x assembly instructions

Part No.: 084395-06

FAQ

Are intermediate lengths also possible?

The system is designed in grid lengths of 4 m. If necessary, the last rail can be shortened on site with a few simple steps and a metal saw.

Is it possible to use two current collectors to comply with the earthing specifications?

The current collector already has a redundant version of the PE contacts, so there is no need for a second current collector.

Why can the conductor rail be subjected to higher loads than cables with the same cross-section?

In the conductor rail, the conductors are separated and can dissipate the heat better than a cable. This means that higher currents are possible with the same heat output.

High currents can flow despite small cross-sections. How is this possible?

Standard cranes and hoists are designed for short and intermittent operation. This means that after the lifting or travel movement, a cooling phase takes place due to the design of the crane with limited travel and lifting distance. Standard cranes are designed with a duty cycle of 20 to 40%. This means that with a cycle time of 10 minutes (corresponds to a 100% duty cycle according to the standard), the hoist is in operation for 2(4) minutes and at rest for 8(6) minutes. This means that the load in the active phase can be higher than with a continuous load.

The basic module has a 4-pole current collector. Is there also a basic module with a 5-pole current collector?

The basic module contains the 4-pole collector trolley and a conversion kit for the 5th pole (sliding contact and cable section). The conversion to the 5th pole is self-explanatory and can be completed in 2-3 minutes.

The current collector cable is not included. Why?

The current collector has an integrated terminal box with a removable cable gland and thus enables a suitable cable to be terminated by the customer. This solution was chosen because every customer requires a different length and cables require a very large space for transportation. To ensure shipping costs and flexibility on the construction site, the cable is supplied by the customer.

Can the connection between the rails be loosened again?

The connections are designed so that the conductor rail connectors can be levered out with a screwdriver and the rail connectors can be separated after lifting the latching clamps. Please note that the conductor strip clamps may only be used once.

Are longer lengths over 100 m and higher currents possible, e.g. 200 A, as with other systems?

The system is optimized for standard crane applications. Lengths of over 100 m are not common in this segment, although they are occasionally encountered. For a plastic-based system, systems longer than 100 m make no technical sense and are detrimental to system availability. The expansion behavior and other effects are critical and a poor compromise. High currents are usually selected because of voltage drop. Here, however, it makes more sense to adjust the position or number of feeds. Systems with greater lengths and higher currents should be designed as single-pole conductor rails. Conductix-Wampfler offers further solutions here.

Can I also obtain the conductor rail as curved elements?

The conductor rail is designed for indoor crane applications with straight tracks. For systems with curves, please contact our sales department.

Is the product also available with a higher protection class?

Even on enclosed rails, the current-carrying conductor is not covered and an entry for the current collector is required. Fine dust and moisture, especially condensation, can get into the interior. This means that even with seals, only a limited increase in the degree of protection for enclosed conductor rails is possible.

What is the running performance of the sliding contacts?

The sliding contacts have a wear range of 5 mm. Under normal conditions, this corresponds to a mileage of approx. 8000 - 10000 km. With an average mileage of 450 km per year, the sliding contacts are sufficiently dimensioned, but must be checked during crane maintenance.

Detailed technical design and application information

Technical design

The design is carried out in just a few steps

- Determination of the current
- Testing the voltage drop

Crane operating modes according to IEC 60034-1

The Xline conductor rail is designed for use in workshop- and assembly cranes with a typical duty cycle of 20-40% (duty cycle < 60%). In this application, the load profile is a non-periodic load and speed distribution. This crane operating mode is designated as S9.

In this operating mode, the conductor rail can be operated at rated current and short term overload (starting torque).

Cranes that perform only a few load cycles per day are assumed to operate in short-time S2 or intermittent S3 or S4. In all these cases, the conductor rail can be run with the full rated current, since no thermal overload occurs due to the interruptions and no triggering of the protective device is caused.

Load values for the different operating modes and operating temperatures (ambient temperature)

S1 Continuous operation at full rated current, without cool-down phases (no crane application)

<20°C duty cycle = 100%

>20°C application of the correction factors (page 23) and recommended reduction to 80% duty cycle

S2 Short-term operation under full rated current, recommended reduction: 80% duty cycle (crane usually has 20-30% duty cycle)

S4 Intermittent operation at full rated current, recommended reduction 80% of the duty cycle (crane usually has 20-30% duty cycle)

S9 (non-periodic load and speed curve) Load with rated current up to the equivalent of 80% duty cycle

The following generally applies: With higher ambient temperatures, the convection of the conductor strip, conductor rail and protective device decreases, resulting in a reduction of the rated current (see table of correction factors on page 23). The limiting component is usually the current collector. With Xline, the current collector can be operated with 34 A at 100% duty cycle.

Calculation of the voltage drop

The maximum expected voltage drop is calculated in order to avoid start-up and malfunction cause by undervoltage. The value of the voltage drop should not exceed 3-5% in order to have sufficient reserves for the entire wiring path from the power supply to the load.

The calculation is based on the voltage applied (AC or DC voltage, the length, the starting current and the resistance or impedance specifications).

The distance between the feed-in point of the conductor rail and the furthest position during operation is used as the length.

Note: If several cranes are supplied, the simultaneity factor and the position of each individual crane must be considered or evaluated using an auxiliary table. In this case, not all consumers are included in the calculation and the simultaneity is therefore taken into account.

Voltage drop on the conductor rail

For three-phase current

$$\Delta U = \sqrt{3} \cdot I \cdot I_A \cdot Z$$

For alternating current

$$\Delta U = 2 \cdot I \cdot I_A \cdot Z$$

For direct current

$$\Delta U = 2 \cdot I \cdot I_A \cdot R$$

 $Z = impedance [\Omega/km]$

 $R = Resistance [\Omega/km]$

I = Feed-in length [km]

 I_A = Starting current of the system [A]

Resistance and impedance values $I_A = 1,2 \bullet I_{nenn}$

Туре		
Rated current	63 A	80 A
Cross section [mm²]	10	16
Resistance [Ω/m]	0,0019	0,0011
Impedance up to 60 Hz	0,002	0,0012

Note

The formula is based on the calculation of the starting current with inverter operation with a starting factor of 1.2 x the rated current of the loads. Inverter operation is the most economical and most frequently selected variant today.

Detailed technical design and application information

Current load and protection

In the standard crane range, the fuse protection and power requirement are specified and used as input values for the conductor rail. In most cases, the maximum cable length between the feed point and the hoist is also specified. This information refers to multi-core cables, e.g. as festoon cables. Higher current and power paths can be achieved with conductor rails due to better heat dissipation.

Unless otherwise stated, the nominal values of the components refer to a 100% duty cycle and an ambient temperature of 20°C. With a lower duty cycle, as in the standard crane range of 20 to 60%, the conductor rail can be loaded with higher currents. At higher ambient temperatures, the current load must be reduced.

Temperature correction factor f_T

Ambient temperature °C	20 °C	35 °C	40 °C	45 °C	50 °C	55 °C	60 °C
Correction factor fT standard insulation	1	0.97	0.93	0.89	0.84	0.77	0.71

Permissible continuous current of the conductor rail

 $I_{Dzul \, IIT} = I_{zul} \cdot f_{T}[A]$ with $I_{Dzul \, IIT} > I_{DA}$

I_{Dzul}.UT = Permissible continuous current at ambient temperature

 I_{zul} = Permissible continuous current at 20°C (catalog value) [A]

*f*T = Temperature correction factor

The conductor rail is fused on the power feed side for the rated current of the conductor rail, or less for smaller loads. Beyond the current collector, the load is fused according to the maximum current load of the current collector, the cable, or the cable cross-section at the load.

Use of the conductor rail

The conductor rail components are designed for use in overhead cranes and hoists, preferably indoors with a straight crane runway. They are installed horizontally with the current collector engaging from below using hanger clamps.

Cable connection and cable routing of the current collector

The current collector has an integrated terminal box with cable glands for strain relief of the customer's connecting cable. The cable must be routed in a loop. When designing the loop, it must be ensured

- that the loop cannot get caught when the crane moves
- the cable does not subject the current collector to lateral forces
- strain relief is provided by the cable gland
- the current collector is pulled with the chain towing arm and not with the cable

Environmental influences and protection class

Like all conductor rail systems available on the market, the components have protection class IP2X and can therefore be used anywhere where this protection class is sufficient.

Use in explosion-protected areas or in applications that prohibit the use of conductor rails as an open energy supply system is not permitted.

In contrast to a cable, enclosed conductor rails are not hermetically sealed and are therefore restricted when exposed to weathering, increased dust, suspended matter or gases that affect their function and safety.

Conductor rail and PE function

In most countries, earthing via the runway is no longer permitted for crane systems. The protective conductor must be established via a separate protective conductor pole via the conductor rail. In the risk assessment, the loss of the protective function, e.g. due to damage to the consumer, must be taken into account and the function ensured.

This can be ensured by monitoring the protective conductor circuit or by the redundant design of the current collector. The current collector 0843 has a redundant protective conductor design, which means that the 2^{nd} current collector trolley that would otherwise be required can be omitted.

KAT0843-0001b-EN

www.conductix.com

Conductix-Wampfler

has just one critical mission: To provide you with energy and data transmission systems that will keep your operations up and running 24/7/365.

To contact your nearest sales office, please refer to:

www.conductix.contact



