



Installation Instructions

Tightening the Cable Clamps

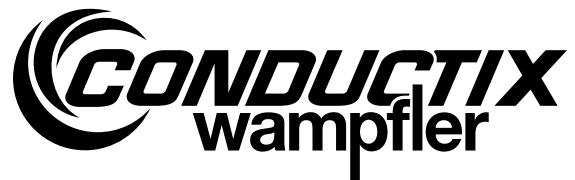

Round Cable Clamp 031941-... 0300

For all types of cables

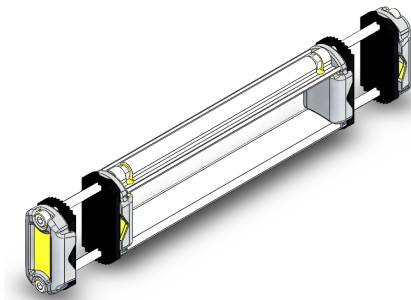

Round Cable Clamp 031941-...

Tools required

- Wrench (size 13 mm)
- Socket Head Wrench (size 6 mm)
- Caliper


- Take the cable that you want to clamp and determine the diameter (x)
- Tighten the screws until the gap between the clamps (X) is the same as the cable diameter (X), see pictures below.

The tolerance of the gap is $X \pm 0.5$ mm.



Measuring the cable diameter (X)

If necessary block nut while tightening

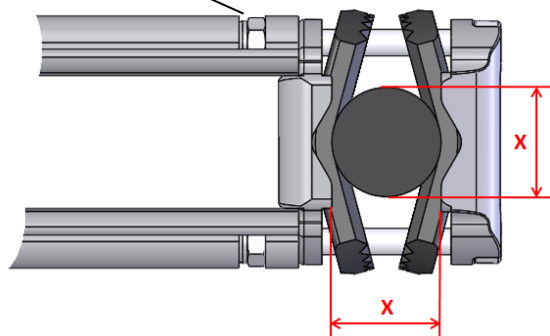


Round Cable Clamp and cable



Measuring the gap (X)

Installation Instructions

Tightening the Cable Clamps

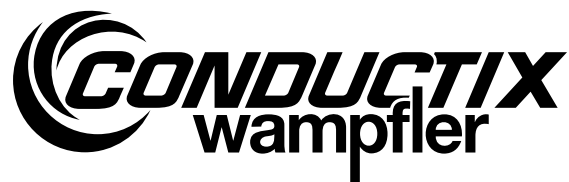

Round Cable Clamp 031941-... 0300

Conductix-Wampfler GmbH
Rheinstraße 27 + 33
79576 Weil am Rhein - Markt
Germany

Phone: +49 (0) 7621 662-0
Fax: +49 (0) 7621 662-144
info.de@conductix.com
www.conductix.com



Importer for the United Kingdom:
Conductix-Wampfler Ltd.
1, Michigan Avenue
Salford
M50 2GY
United Kingdom

Phone: +44 161 8480161
Fax: +44 161 8737017
info.uk@conductix.com
www.conductix.com